

Washer dryer

Check and clean washing machine filters

Check and empty water tank or reservoir regularly

Check and clean washing machine soap powder tray

Check and clean washing machine drum seal

Do not operate washing machines and dryers when sleeping

Dryers

Check and clean regularly lint filter of dryers

Do not operate washing machines and dryers when sleeping

Cooker oven

Check cooker, oven and clean, remove fat, oils, debris internally and externally

Do not leave stove and oven unattended

Fridge freezer

Remove items from fridge/freezer and clean

Check and dispose expired items and defrost fridge/freezers

Check to ensure the fridge/freezer clearance from the back wall is at least one to two inches

Toasters

Ensure and clean toasters

Kettles

Ensure sufficient water inside the kettle before turning on

Microwaves

Ensure and clean microwaves